


**THE
SHARPER
IMAGE®**

**Ionic Breeze
GP® Desktop**

SI720 Instructions

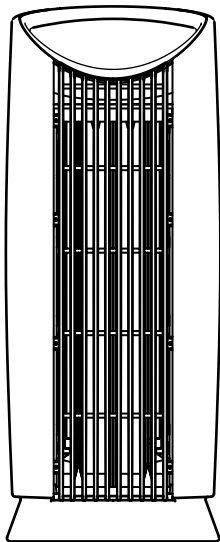

Read and save these instructions.

Dear Sharper Image Customer,

Thank you for your purchase of a Sharper Image product. We appreciate your business very much.

This item was created by Sharper Image Design, our company's own product development group. Please accept my personal assurance of your complete satisfaction with this product's quality and performance. We offer generous return privileges and excellent warranties on all our products.

For more than 25 years, The Sharper Image has shared the fun of discovering innovative products that make life better and more enjoyable. We've been in business a long time because we are an exciting place to shop and — just as importantly — we strive to deliver great customer service that exceeds your expectations.

Enjoy your purchase!

Respectfully,



Richard Thalheimer

Founder, Chairman and Chief Executive Officer

*Call 1-800-344-4444 for 24-7 ordering and customer service, or go to **www.sharperimage.com**, our complete online store.*

Table of Contents

Warning	5
Caution	6
Frequently Asked Questions About the Ionic Breeze®	7
Setup and Operation	8
Cleaning the Collection Grid	9
Thorough Cleaning	10
Germicidal Lamp Replacement	11
Additional Information	12
Statement of FCC/DHHS Compliance	13-14
FCC Label of Compliance Statement	14
Warranty	16

Warning

To reduce the risk of fire, electric shock, or injury when using any electrical appliance, basic precautions should always be followed, including:

- Use indoors only.
- Unplug from outlet when not in use and before servicing.
- Use only as described in this user manual.
- Do not use if the adapter or the plug appears to be damaged. If the appliance is not working properly, or has been dropped, damaged, left outdoors or dropped into water, return it to a service center or to the original place of purchase.
- Do not handle the adapter or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked. Keep all openings free of dust, lint, hair or anything that may reduce airflow.
- Keep hair, loose clothing, fingers and all parts of the body away from openings.
- Do not operate the unit in areas where flammable or combustible products or vapors may be present.

Read and Save These Instructions

Caution

This product generates invisible ultraviolet light. To avoid over-exposure when the lamp is on, stay at least one foot away from the unit if the total duration of exposure to the unit will be more than 30 minutes per day. Shorter durations of exposure at close proximity are safe. If the enclosure is damaged, do not use the product.

Never stare at the UV lamp or place your face directly against the front or rear grill during operation.

Failure to follow these warnings can result in direct exposure to germicidal light, which can cause temporary or chronic damage to your eyesight, or may even result in blindness.

The collection grid has many edges and areas that can trap water. If running water is used to clean the grid, allow the collection grid to dry completely.

If candles or oil lamps are burned, the collection array must be cleaned immediately or the collected soot may be released back into the room. In any area where this product will be subjected to heavy pollution it will be necessary to clean the collection array more often.

Frequently Asked Questions About the Ionic Breeze®

What is the rattle I hear when I move the housing?

Whenever the unit is inverted, there are two glass beads inside that slide back and forth to scrape the ionizing wires. This action helps keep the wires clean and silent. The beads rattle when you pick up or move the main housing.

How often is cleaning required?

At least every two weeks or anytime the Ionic Breeze makes an audible sound.

How should it be cleaned?

Wipe the removable collection grid with a damp cloth, paper towel or sponge. **It is very important that the collection grid be allowed to dry completely before returning it to the main housing.**

What is the clean, fresh scent I smell?


This scent is ozone, (O₃), a combination of three oxygen atoms. (The U.S. government has set safe standards for ozone and the Ionic Breeze complies with those standards.)

Setup and Operation


1. Place the Ionic Breeze GP® Desktop at least six inches from the wall.
2. Plug the adapter jack into the base of the Ionic Breeze GP and the adapter plug into a 120V outlet.
3. Switch the **POWER CONTROL** to the desired setting:

ON - The unit will clean and circulate the air but the germicidal lamp is not activated.

ON/G.P. - Air is passed through UV light produced by the germicidal lamp.

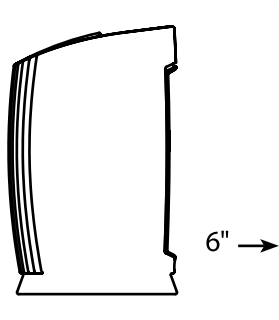



Note: The blue glow within the unit indicates that the germicidal lamp is operating.

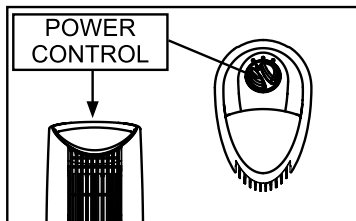

Cleaning the Collection Grid

Clean the grid every one or two weeks.



1. Before cleaning, unplug the unit.
2. To remove the collection grid, pull it from the top of the unit.
3. To quickly wipe the dust from each of the three collection bars, use a dry or slightly damp towel or sponge.
4. Before replacing the grid, invert the entire unit two or three times.
5. Beads inside the unit slide up and down. This removes particle buildup from the ionizing wires and helps maintain silent operation.

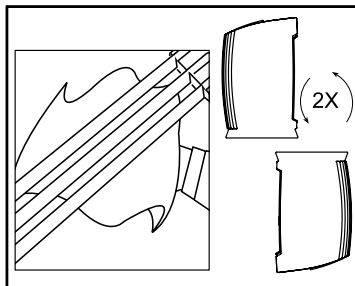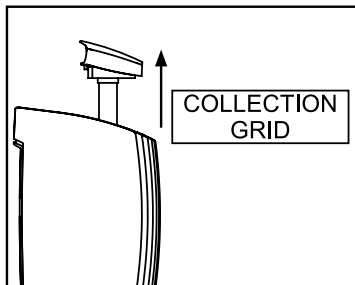

Thorough Cleaning

If the unit makes noise during operation, a thorough cleaning of the grid and ionizing wires may be required.

1. To remove the collection grid, pull it from the top of the unit.
2. Wash the grid with warm soapy water, rinse and **allow to dry for 24 hours** before returning it to the unit.
3. To remove any accumulated particles from the ionizing wires and to blow out any dust that is settled in the base of the unit, use canned air. (Because of the dust, we recommend doing this outside.)

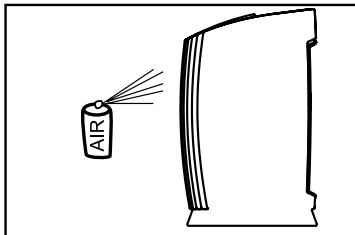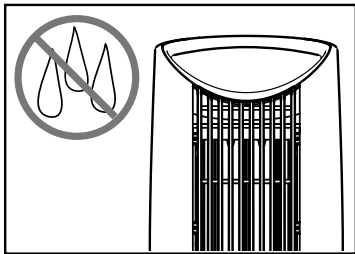

Canned air is available from The Sharper Image.


Germicidal Lamp Replacement

Lamps are effective for 6,000 hours, or about 8 months of continuous use. Replace earlier if there is no “blue glow” inside the housing, when the unit is running in GP mode.

Oil from fingers will reduce the germicidal performance of the UV lamp. DO NOT allow fingers to come in contact with the glass. Use gloves or handle only by the metal area of the lamp. If you touch the lamp or need to clean it for any reason, wipe with a paper towel dampened with alcohol or any ammonia-based cleaner (such as Windex® brand).

1. To unlock the back cover, slide the **LOCKING TAB** open. Remove the back cover by lifting it up and sliding it up and out.
2. Turn the lamp 1/4 turn and slide it from its fixture. Replace with a new lamp of the same type.

Replacement lamps are available directly from The Sharper Image.

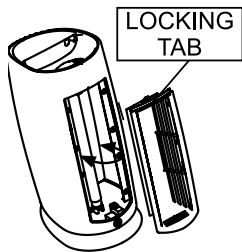

Consult your local regulations for the proper disposal method of used fluorescent lamps.

Additional Information

The exterior of the unit can be cleaned using a cloth or sponge and a solution of one part household bleach to five parts water or any bleach-based spray cleaner.

Allow the surface to dry completely before plugging it back into an outlet.

The unit will not function while the collection grid is removed and/or the germicidal lamp cover is removed.

The Ionic Breeze has been independently tested and found to comply with U.S. government limits on the maximum acceptable level of ozone, less than 50 parts per billion by volume of air circulating through the device.

Statement of FCC/DHHS Compliance

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This product complies with DHHS Rule 21 subchapter J at date of manufacture.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

Statement of FCC/DHHS Compliance

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

FCC Label Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Five-Year Warranty

What Is Covered

This warranty covers any defects in materials or workmanship, with the exceptions stated below.

How Long Coverage Lasts

This warranty runs for five years from the date of original purchase.

What Is Not Covered

This warranty does not cover damage caused by misuse or use other than as intended and described in the product instruction manual, or loss or damage to batteries or removable parts.

What The Sharper Image Will Do

The Sharper Image will repair any defects in materials or workmanship. In the event repair is not possible, The Sharper Image will either replace this product with one of similar features and price, or refund the full purchase price of the product, whichever you prefer.

How to Obtain Service

Return the product and receipt, along with a brief explanation of the problem, to:

T.S.I. - Returns Department
2901-A West 60th Street
Little Rock, AR 72209

If you have questions please feel free to contact our customer service representatives at 1-800-344-5555 or by email at care@sharperimage.com.

This warranty gives you specific legal rights, and you may have other legal rights that vary from state to state.

Copyright 2003

Sharper Image Corporation
650 Davis St., San Francisco, CA 94111
(415) 445-6000

Shop online: **www.sharperimage.com**

Due to continuing improvements, actual product may differ slightly from the product described herein.
V2 07/03